


MOTO IRON™ SPRINGER SPACER ASSEMBLY DIAGRAM 1984-1999 WIDEGLIDE WHEELS

RIGHT SIDE OF WHEEL

(WHEN SEATED ON BIKE)

www.motoiron.com

PARTS LIST		
ITEM	QTY	DESCRIPTION
1	1	SPRINGER AXLE
2	1	CALIPER BRACKET
3	1	BRAKE SPACER
4	2	THRUST WASHER
5	1	OUTER BRAKE SPACER
6	1	BEARING SPACER
7	1	BRAKE CALIPER
8	1	SPRINGER WHEEL SPACER
9	2	3/4-16 UNF ACORN NUT

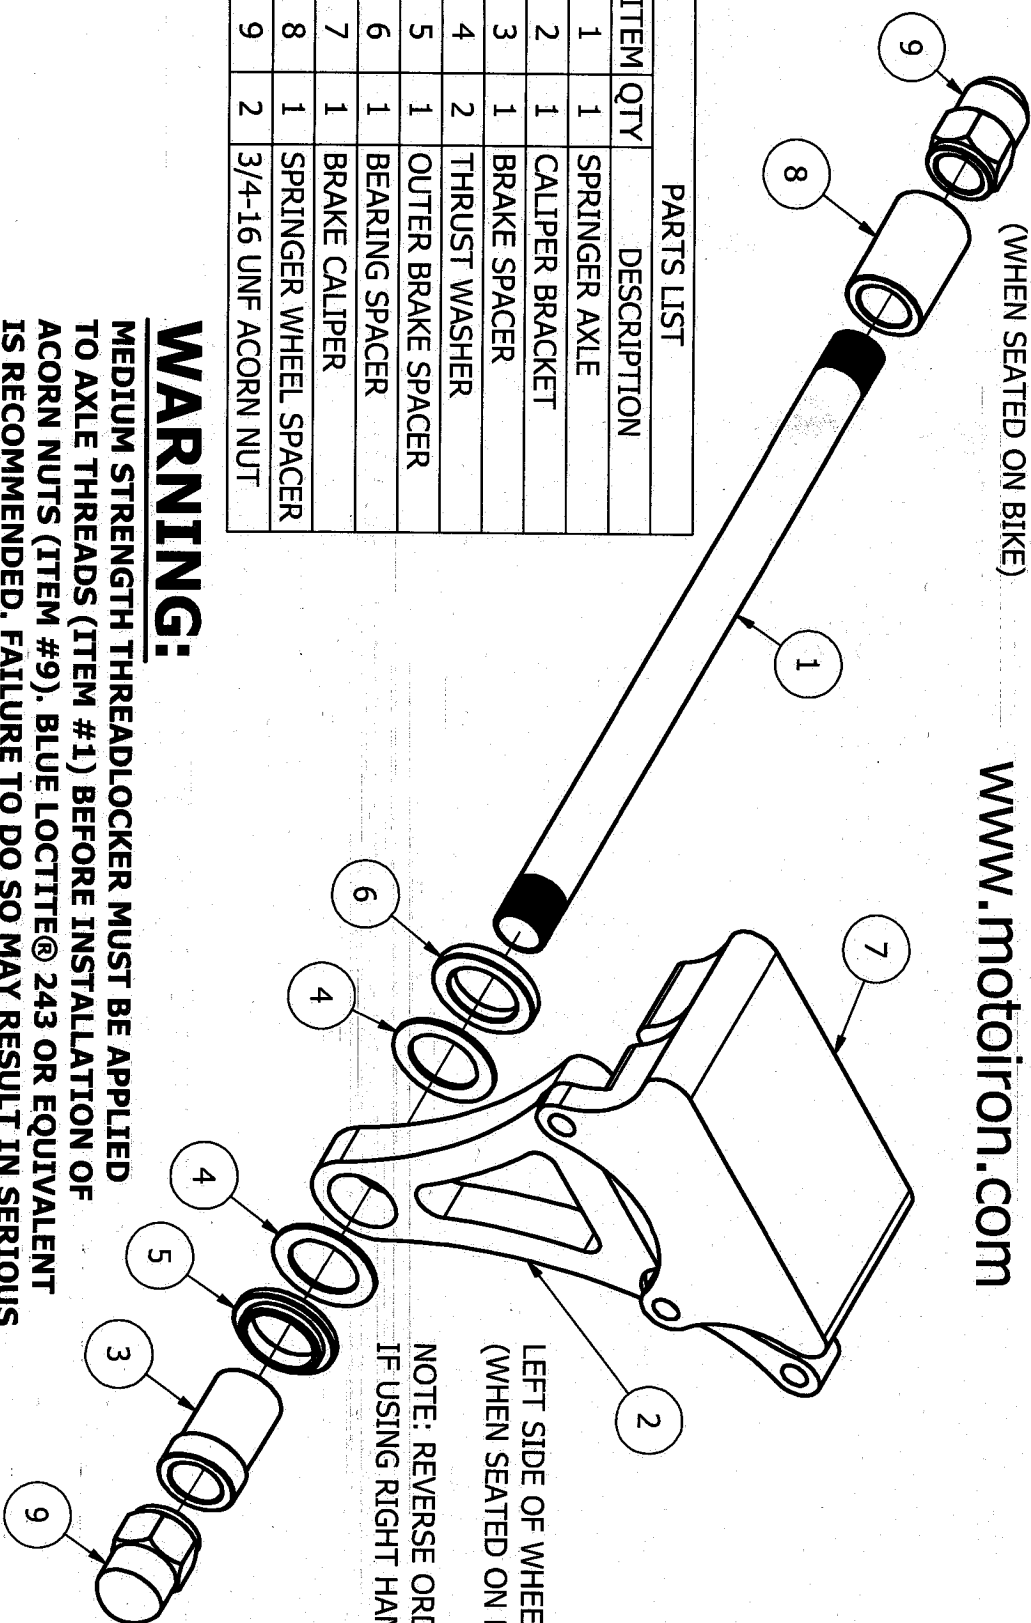

WARNING:

MEDIUM STRENGTH THREADLOCKER MUST BE APPLIED TO AXLE THREADS (ITEM #1) BEFORE INSTALLATION OF ACORN NUTS (ITEM #9). BLUE LOCTITE® 243 OR EQUIVALENT IS RECOMMENDED. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY OR DEATH!